

2 Getting started

Welcome...

to your BT Decor 1100
Corded Telephone

- Three one-touch memory buttons for easy dialling of your most important numbers.
- Quickdial memory to store 10 more useful contact numbers.
- Secrecy feature lets you talk to someone else close by without your caller hearing you.
- Last number redial at the touch of a button.
- The BT Answer (1571) button flashes to let you know when you have received new voice mail messages on your network's answering service*

This User Guide provides you with all the information you need to get the most from your phone. Before you make your first call you will need to set up your phone. Follow the simple instructions in 'Getting Started', on the next few pages.

Hearing aid?

The BT Decor 1100 is fitted with an inductive coupler so it is compatible with hearing aids.


Got everything?

- BT Decor 1100 telephone
- Base plinth
- Telephone line cord
- Wall mounting screws
- User Guide

* Requires subscription to BT's Call Minder or 1571 Service and 4 x AA batteries must be fitted (not included) for this feature to work.

3 Getting started

Connecting the handset to the base

Turn the phone over and connect the curly handset cord into the socket marked with the  symbol. Turn the phone back over and position the handset on the receiver.


Removing the base plinth (optional)

Your BT Decor 1100 will come with the base plinth already attached. If you want to use your BT Decor 1100 on a flat surface such as a table or desk then we advise you to leave the plinth attached.

If you prefer to wall-mount your BT Decor 1100, please refer to the instructions shown on page 11.

If you want to remove the base plinth, turn the plinth lock switch on the underside of the phone to the 'unlock' position and unclip.


Connecting to the telephone line

Connect the telephone line cord to the socket marked  on the back of the base and plug the other end into the telephone wall socket.


Your BT Decor 1100 is now ready for use.

4 Getting to know your phone

Corded telephone

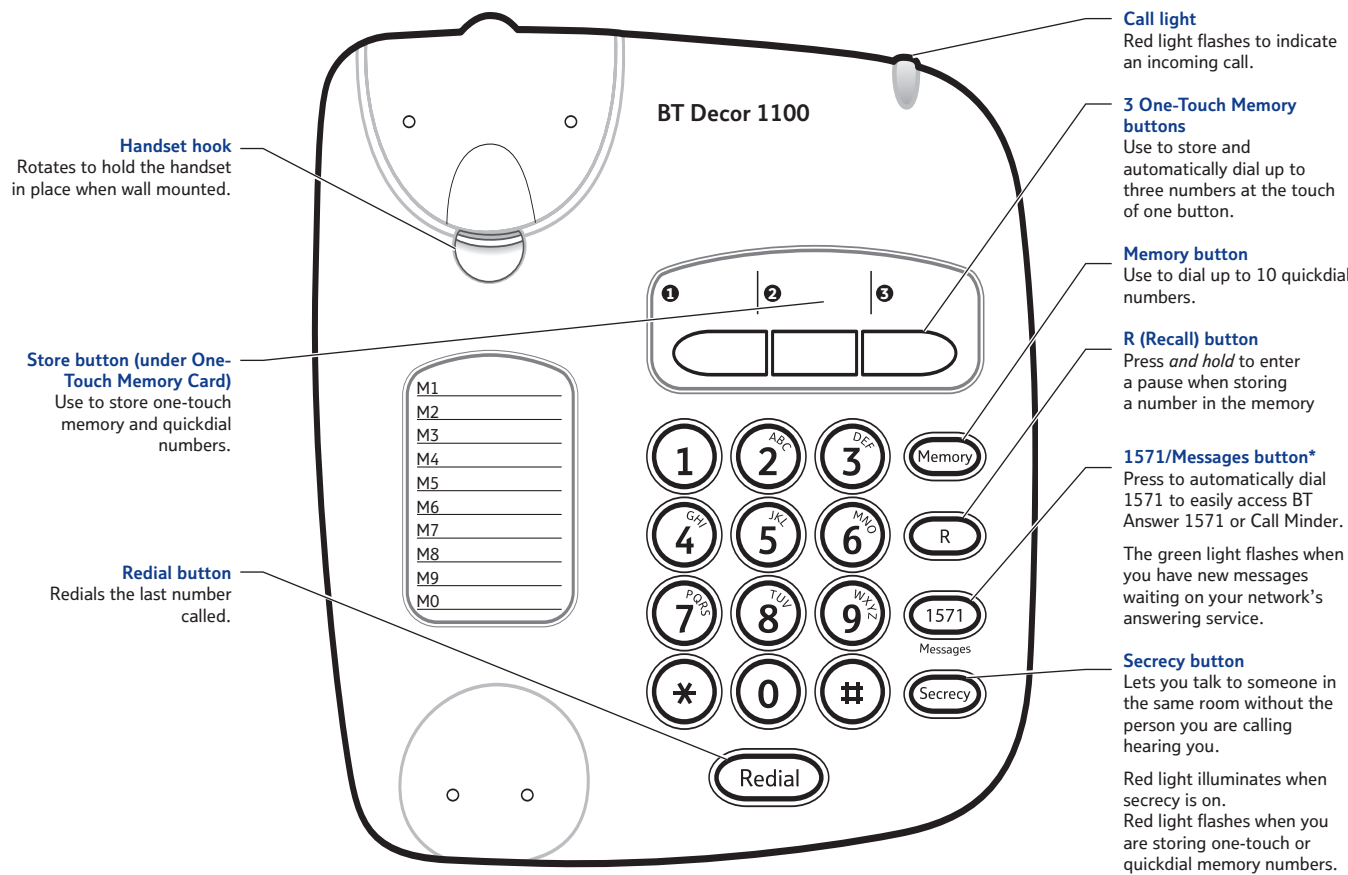

Underneath your phone:

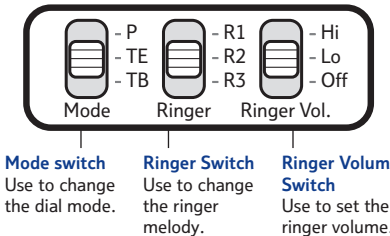

* To use the 1571 feature, you must subscribe to your network's answering service. Batteries must be installed to be able to use the 1571 button.

6 Using your phone

Making and ending calls

Make a call

1. Lift the handset and wait for the dial tone.
2. Dial the telephone number.

End a call

Replace the handset.

Receive a call

When you receive a call, the telephone rings and the red call light flashes. Simply pick up the handset to answer the call.

Redial the last number called

1. Lift the handset.
2. Press the **Redial** button. The last number called is dialled.

A redial number can be no longer than 32 digits.

Secrecy

When on a call you can use the secrecy feature to talk to someone in the same room, without your caller hearing.

To switch secrecy on and off

1. During a call press *and release* the **Secrecy** button.

The secrecy button will illuminate red to show that secrecy is on.

Your caller will be put on hold. You can now talk to someone in the room without your caller hearing you.

2. Press *and release* the **Secrecy** button again to return to your caller. The red secrecy light will go out.

7 Using your phone

Adjust the ringer volume

There are 3 volume settings to choose from: HIGH, LOW or OFF.

The default setting is High (Hi).

If the ringer is set to OFF, the call light will still flash to indicate when someone is calling you.

Turn the phone over and move the Ringer Vol. Switch to the volume you want: Hi, Lo or Off.



Ringer Vol.

Set the ringer melody

There are 3 ringer melodies to choose from.

The default melody is R1.

Turn the phone over and move the Ringer Switch to the position you want: R1, R2 or R3.



Ringer

Set the dial mode

There are 3 dial mode settings. Tone/Timed break (TB), Tone/Earth (TE) and Pulse/Earth (P). The default setting is Tone/Timed break (TB).

You should only have to change this setting if connected to a switchboard that requires Pulse dialling.

Turn the phone over and move the Mode Switch to the position you want: P, TE or TB.



Mode

8 Using your phone

One-Touch memories

You can store your three most frequently used telephone numbers in the One-Touch memories (1, 2 or 3).

The one-touch memory card (located around the one-touch buttons) can be used to keep a record of your one-touch memory numbers/contact names. Lift the plastic plate up and you can write on the card.

To store a One-Touch number



The **Store** button is located underneath the one-touch memory card. You will need to remove the card and plastic plate before you can access it.

1. Lift the handset.
2. Press the **Store** button. The red secrecy light will flash.
3. Press the memory location number (1, 2 or 3), in which you want to store the number.
4. Enter the telephone number you want to store including the area code.
Please note that the number can be no longer than 32 digits.
5. Press the **Store** button. You will hear a confirmation tone.
6. Replace the handset.

To dial a One-Touch number

1. Lift the handset and wait for the dial tone.
2. Press the memory location number in which the number you want is stored (1, 2 or 3). The number is dialled automatically.

To insert a pause in a memory number

Sometimes you may need to enter a pause when storing a number, e.g. with an overseas number you may need to enter a pause after storing the international code.

Press *and hold* (for approx 1.5 seconds) the **R** button in the place where you want to enter a pause.

When you dial the number your BT Decor 1100 will automatically insert the pause where you stored it.

